

Performing a Clean Reset is designed to set your device back to factory settings. It will erase any files or programs you have on the device. **Be sure to copy any files you may need off of the device before doing a clean reset.**

Clean Reset On a Socket Somo

1. Press and hold the left programmable button, the calendar button, and the contacts buttons.



How to: Perform a Clean Reset On a Socket Somo 650

2. While holding these buttons in, lightly press the reset button with the stylus. The reset button is a small recessed circle on the bottom of the device.



3. Continue to hold the three buttons from step 1 down until a screen appears displaying the Socket logo. You will need to put in the date and time again and then finish the rest of the set up.